Installation & Removal





Connect hydraulic hose line from pump to shore. Hook release tool through handle and lower shore into trench.





Place shores in accordance with the Tabulated Data and begin pressurizing the shore. Normal operating pressure is 750 to 1500 psi.





When shore is in place and pressurized to a safe working range, disconnect the hose fitting with the release tool.





Release shoring fluid at hose fitting with the release tool and allow shore to depressurize. The released fluid is biodegradable.





Pull the shore from the trench with the removal hook and release tool. The shore will scissor back toward a folded position.





Continue pulling the shore away from the trench until it folds flat. Finger guards help protect from pinch points.

